

IMPORTANT

— Care of Your DEEKS —

1. At end of hunting season, remove rings and marbles.
2. Wash and dry thoroughly.
3. Store in a carton in a cool, dark, dry place.
4. Always keep rubber away from heat and oil of any nature when in storage.
5. When storing, place in air-tight container.

— How To Use Your DEEKS —



1. Insert marble in the small hole in front of DEEK and attach an anchor cord.

2. For most hunting conditions attach a $\frac{3}{4}$ oz. or 1 oz. tear-drop lead weight. On a large body of water or in a fast moving stream, a heavier anchor is recommended.



3. DEEKS are easy to use. Simply drop them on the water. To deflate, pick up and insert anchor and cord inside, and place head of DEEK into opening in the stem. This will prevent any tangling of anchors and cords.



4. DEEKS can be easily repaired with ordinary adhesive tape.

DEEKS®

is a product of I.S.A. Corporation



www.DEEKSdecoys.com

Salem, Oregon 97302

IMPORTANT

— Care of Your DEEKS —

1. At end of hunting season, remove rings and marbles.
2. Wash and dry thoroughly.
3. Store in a carton in a cool, dark, dry place.
4. Always keep rubber away from heat and oil of any nature when in storage.
5. When storing, place in air-tight container.

— How To Use Your DEEKS —



1. Insert marble in the small hole in front of DEEK and attach an anchor cord.

2. For most hunting conditions attach a $\frac{3}{4}$ oz. or 1 oz. tear-drop lead weight. On a large body of water or in a fast moving stream, a heavier anchor is recommended.



3. DEEKS are easy to use. Simply drop them on the water. To deflate, pick up and insert anchor and cord inside, and place head of DEEK into opening in the stem. This will prevent any tangling of anchors and cords.



4. DEEKS can be easily repaired with ordinary adhesive tape.

DEEKS®

is a product of I.S.A. Corporation



www.DEEKSdecoys.com

Salem, Oregon 97302

IMPORTANT

— Care of Your DEEKS —

1. At end of hunting season, remove rings and marbles.
2. Wash and dry thoroughly.
3. Store in a carton in a cool, dark, dry place.
4. Always keep rubber away from heat and oil of any nature when in storage.
5. When storing, place in air-tight container.

— How To Use Your DEEKS —



1. Insert marble in the small hole in front of DEEK and attach an anchor cord.

2. For most hunting conditions attach a $\frac{3}{4}$ oz. or 1 oz. tear-drop lead weight. On a large body of water or in a fast moving stream, a heavier anchor is recommended.



3. DEEKS are easy to use. Simply drop them on the water. To deflate, pick up and insert anchor and cord inside, and place head of DEEK into opening in the stem. This will prevent any tangling of anchors and cords.



4. DEEKS can be easily repaired with ordinary adhesive tape.

DEEKS®

is a product of I.S.A. Corporation



www.DEEKSdecoys.com

Salem, Oregon 97302